

Traveler® HTC

Hospital Transport Chair Manual Wheelchair



User Manual

3J01-INS-LAB-RevC14 © 2012 GF Health Products, Inc.

Read this manual before operating your wheelchair.

Save this manual for future use.

The most current version of this manual can be found online at www.grahamfield.com.

CONTENTS

1	INTRODUCTION
2	IMPORTANT SAFETY PRECAUTIONS5
3	GETTING STARTED8
4	HANDLING TIPS9
5	ASSEMBLY
6	ADJUSTMENTS17
7	MAINTENANCE23
8	TROUBLESHOOTING28
9	LIMITED WARRANTY29
10	INDEX31

GF Health Products, Inc. is not responsible for typographical errors. All illustrations, specifications, packaging and warranties contained in this catalog are based on the latest product information available at the time of printing. The most current product information, including the most current revision of this manual, can be found online at www.grahamfield.com. Graham-Field, Everest & Jennings, E&J, and Traveler are registered trademarks of GF Health Products, Inc.

READ THIS MANUAL BEFORE OPERATING YOUR WHEELCHAIR

1 INTRODUCTION

Important safety, operating, and maintenance instructions that warrant your attention are included in this user manual. Read the entire manual carefully before operating your new wheelchair, and refer to it as often as necessary to help maintain good performance standards.

Consult your healthcare professional and GF authorized distributor for assistance in developing and learning safe and effective techniques for performing your daily activities according to your individual physical abilities and needs, and to make certain that your wheelchair is properly prescribed and adjusted for your use.

The safety precautions in this manual are general warnings intended to be used only as basic guidelines. You may find it necessary to develop your own methods for safely solving frequently encountered challenges. Again, consult your professional medical advisors for their recommendations about safety methods, and never hesitate to ask for their assistance.

Your wheelchair should receive frequent, regularly scheduled maintenance, including an inspection of the mechanical parts, to ensure proper operation. Some suggested inspection procedures, troubleshooting procedures, and adjustment procedures are included in this manual. When it comes to service and repair, remember that your GF authorized distributor knows your wheelchair best.

Thank you for choosing an Everest & Jennings product. We at GF Health Products, Inc. wish to assure you of our continuing commitment to provide innovation and quality in our products. The Traveler HTC, intended for institutional use, provides the ideal solution to the hospital/clinical transport need by incorporating special attendant and inventory control features with a heavy duty frame designed to support up to 500 lb users.

The person performing adjustments on the Traveler HTC has the responsibility of making certain that the user can safely operate the wheelchair with the adjustments selected. This person must evaluate the user's ability, weight, physical condition, the environment in which the wheelchair will be used, and the terrain over which the wheelchair will travel. We recommend the use of anti-tippers at all times.

Please note the following special statements, used throughout this manual, and their significance:

- ▲ NOTICE: Indicates a potential hazard situation or unsafe practice that, if not avoided, could result in product or property damage.

Info: Provides application recommendations or other useful information to ensure that you get the most from your product.

2 IMPORTANT SAFETY PRECAUTIONS

IMPORTANT SAFETY PRECAUTIONS: ALWAYS FOLLOW THESE SAFETY PRECAUTIONS WHEN USING YOUR WHEELCHAIR. FAILURE TO DO SO COULD RESULT IN PERSONAL INJURY TO YOU OR OTHERS OR DAMAGE TO YOUR WHEELCHAIR.


Safety requires the constant attention of the wheelchair user and the attendant. It is extremely important to learn and always use safe methods of performing basic daily activities. Always consult your healthcare professional to determine those methods most suitable for your individual abilities.

Protect yourself and your wheelchair by having your Traveler HTC serviced regularly. Whenever any part of your Traveler HTC is not functioning properly, contact your GF authorized distributor immediately, as a hazardous situation could result, causing personal injury or damage to your wheelchair. ONLY EXCELLENT CONDITION IS ACCEPTABLE WHERE SAFETY IS CONCERNED. Periodic inspection, adjustment, and replacement of worn parts will provide many years of superb performance.

WARNINGS

3 GETTING STARTED

Please familiarize yourself with main components, identified in Traveler HTC illustration below.

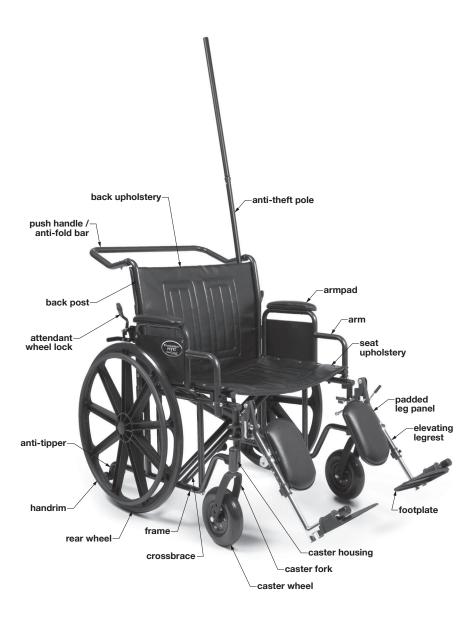

4 HANDLING TIPS

The Everest & Jennings Traveler HTC has been designed and engineered to perform as a stable and well balanced unit when used for its intended purpose. However, it is possible to tip the Traveler HTC over if it is used improperly. We urge you to learn the characteristics of your wheelchair. It is most important to learn safe methods to perform the daily activities basic to your lifestyle. Consult your medical professionals for assistance in developing the skills and proper techniques to perform all activities safely.

BALANCE

Proper balance is the key to maintaining the stability of your wheelchair. Reaching, bending, and transferring to or from a wheelchair will change the weight distribution and center of gravity of you and your wheelchair. When performing such activities, do so as instructed in the following paragraphs to avoid tipping the wheelchair.

TRANSFER ACTIVITIES

Transferring into or out of a wheelchair is a very difficult maneuver. Exercise extreme care when transferring without the aid of either an attendant or a patient lift. Consult your physician, nurse, or physical therapist for assistance in developing your individual technique. Make sure that the wheelchair is stabilized, and will not move or slide during the transfer. Take extra precaution to prevent tipping. Use good body mechanics to prevent personal injury.

REACHING / BENDING

⚠ WARNING: Always turn the casters frontward to provide stability while reaching. If in doubt, ask for assistance or use a device that will extend your reach without requiring you to shift your weight.

Although it is not recommended, you may find it occasionally necessary to lean or reach from your wheelchair. Consult with your healthcare professional for assistance in developing your personal safe reaching or moving techniques suited to your ability and restrictions.

Forward or sideward

- ⚠ WARNING: Do not attempt to reach objects if you are required to move forward in the seat. Do not attempt to retrieve objects from the floor if you must reach down between your knees. Do not shift your weight in the direction that you are reaching and / or bending; this could cause the wheelchair to tip.
- 1. Maneuver the wheelchair as close as possible to the object you wish to reach.
- 2. Rotate both casters fully forward; go forward, and then back the wheelchair toward the object to swing the casters fully forward.
- 3. Engage both wheel locks.
- 4. Ensure that the casters are rotated fully forward before reaching. If not, repeat step 2.

Backward

- 1. Maneuver the wheelchair as close as possible to the object; the rear wheels will limit how close you can get.
- 2. Rotate both casters fully forward; go forward, and then back the wheelchair toward the object to swing the casters fully forward.
- 3. Reach only as far as your arm will extend without changing your sitting position. If in doubt, reposition the wheelchair or ask for assistance.

RAMPS AND INCLINES

Most people are capable of negotiating short inclines without assistance, depending upon upper body strength, endurance, and the degree of incline. Know your own capabilities and limitations in terms of strength and endurance before attempting to negotiate an incline or decline. Practice with an attendant or healthcare professional first before attempting any inclines, declines, curbs or ramps. Always inspect the ramp for hazards such as holes, slippery or uneven surfaces, etc. before starting up or down. If you can not see the entire ramp, ask someone to inspect it for you.

Ascent

Lean the upper part of your body slightly forward as you ascend the incline. If it becomes necessary to stop on the incline, avoid any abrupt or sudden forward movement as you resume climbing, this could cause tipping.

Descent

Always face forward when going down a ramp, but do not lean forward; this could cause tipping. Lean slightly backward to increase stability. It is critical to keep the wheelchair under control at all times. Descent should be made slowly and safely by grasping the handrims; however,

use care, as friction heat will be generated. We recommend the use of gloves to reduce the effects of friction heat, but going slower is a better alternative.

CURBS AND STEPS

Curbs, steps and stairways are dangerous obstacles that confront the wheelchair user. When you encounter curbs, find a way around, or use the ramps now available in most locations. If you encounter steps and there is no ramp available, avoid the steps by utilizing the disabled designated elevators now required in most locations.

5 ASSEMBLY

UNPACKING

- 1. Check for any obvious damage to the carton or its contents. If damage is evident, notify the carrier or your GF authorized distributor.
- 2. Remove all loose packing from the carton.
- 3. Carefully remove all the components from the carton.

Info: Unless the Traveler HTC is to be used immediately, retain boxes, containers and packing material for use in storing until use of Traveler HTC is required.

Inspection

- 1. Examine the wheelchair for nicks, dents, scratches or other damage.
- 2. Inspect all components.

Storage

- 1. Store the repackaged wheelchair in a dry area.
- 2. Do not place other objects on top of the repackaged wheelchair.

ASSEMBLY

Specific tools needed to perform each assembly step are identified in assembly directions. A complete list of tools needed to perform all operations in this section follows:

M13 wrench M10 wrench M5 hex key M4 hex key

Unfold Traveler HTC

Unfold the Traveler HTC by pushing down with even pressure on the top of the seat upholstery on both sides.

Install Push Handle / Anti-Fold Bar

M10 wrench, M4 hex key


1. Slide the push handle / antifold bar over both back posts as shown at right.

 Install the nuts and bolts that secure the push handle / anti-fold bar on both sides as shown at right. Use an M10 wrench and M4 hex key to tighten.




M13 wrench, M5 hex key


- 1. Slide the anti-tipper tube, wheels downward, into the frame bottom rail, as shown at lower right.
- 2. Install bolt through top frame rail hole, anti-tipper, and bottom hole as shown. Install nut on bolt. Use an M13 wrench and M5 hex key to tighten.
- 3. Repeat steps 1 and 2 for other anti-tipper.

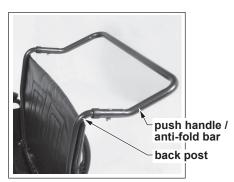

install push handle / anti-fold bar

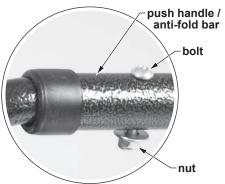

secure push handle / anti-fold bar

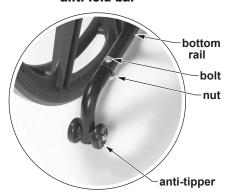


install anti-tipper

Install Anti-Theft Pole


M10 wrench, M4 hex key

- 1. Attach upper pole section to lower pole section using the included M6 bolt and nut as shown at right.
- 2. Use an M10 wrench and M4 hex key to tighten.

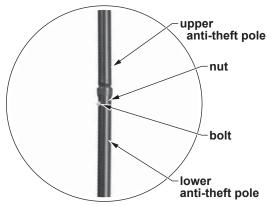

attach upper and lower anti-theft poles

- 3. Attach the pole assembly to the wheel lock bracket using M6 bolt and nut as shown at right.
- 4. Use an M10 wrench and M4 hex key to tighten.

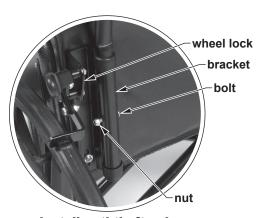


install anti-theft pole

Install Elevating Legrests (or Optional Footrests)

M13 wrench

- ⚠ WARNING: The footplates' lowest point should be no closer to the ground than 2 1/2 inches, to permit proper clearance.
- 1. Set legrest on wheelchair frame (so that legrest hinge plates engage hinge pin bolts).
- 2. Swing legrest inward.
- 3. Attach anti-theft nuts.
- 4. Use an M13 wrench to tighten.
- 5. Ensure legrests are locked in place and swingaway release levers are locked in a rearward position, toward back of wheelchair.

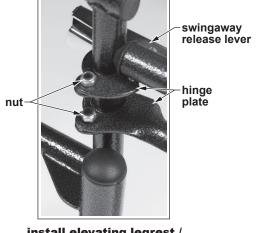

install elevating legrest / optional footrest

6 ADJUSTMENTS

The Traveler HTC offers several adjustments to make it easier and more comfortable to drive. Section 7, MAINTENANCE, offers preventive maintenance suggestions for keeping your wheelchair in excellent condition; ensure that all components are in excellent condition before adjusting. The following are recommended methods; after a few adjustments, you may develop your own. Always consult your GF authorized distributor for assistance.

The person performing adjustments on the Traveler HTC has the responsibility of making certain that the user can safely operate the wheelchair with the adjustments selected. This person must evaluate the user's ability, weight, physical condition, the environment in which the wheelchair will be used, and the terrain over which the wheelchair will travel.

All adjustments and their page locations are referenced in the index at the end of this manual. Specific tools needed to perform each adjustment are identified in adjustment directions. A complete list of tools needed to perform all adjustments in this section follows:

Hex wrench furnished with wheelchair M13 wrench M10 wrench M5 hex key M4 hex key

REAR WHEELS & CASTERS

We recommend that you do not replace or adjust rear wheel or caster components yourself, since special tools and training are required. Please contact your GF authorized distributor when your rear wheels or casters need adjustment, or if you wish to change seat height.

ARMS

M10 wrench, M4 hex key


All Traveler HTC arms are fixed.

Remove Arm

- 1. Use an M10 wrench and M4 hex key to remove bolt and nut that secure arm to front arm socket.
- 2. Hold arm by center of armpad. Lift straight up and off.



 Hold arm by center of armpad. Lower arm straight down into sockets.

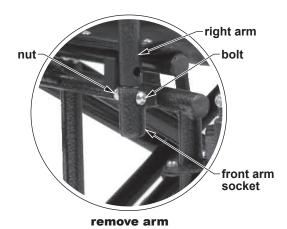

- 2. Install bolt and nut that secure arm to front arm socket as shown above. Use an M10 wrench and M4 hex key to tighten. Ensure nut is tightened and locked in place.

FRONT RIGGING

ELEVATING LEGREST, SWINGAWAY

⚠ WARNING: The footplates' lowest point should be no closer to the ground than 2 1/2 inches, to permit proper clearance.


⚠ WARNING: Do not stand on the footplates; this could cause the

wheelchair to tip.

Remove Elevating Legrest (or Optional Footrest)

M13 wrench

1. Traveler HTC front rigging (elevating legrests or optional footrests) are equipped with anti-theft nuts, shown at right. Use an M13 wrench to remove them.

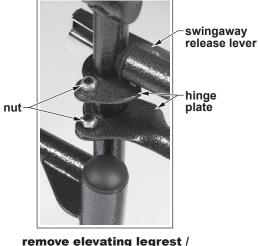

remove elevating legrest / optional footrest

- 2. To release lock, pull swingaway release lever forward, toward front of wheelchair. Legrest will swing outward.
- 3. To remove, lift legrest straight up off hinge pin bolt.

Attach Elevating Legrest (or Optional Footrest)

M13 wrench

- 1. Set legrest on wheelchair frame (so that legrest hinge plates engage hinge pin bolts).
- 2. Swing legrest inward.
- 3. Attach anti-theft nuts. Use an M13 wrench to tighten.
- 4. Ensure that legrests are locked in place and that swingaway release levers are locked in a rearward position, toward back of wheelchair.

ADJUST LEGREST ELEVATION


Raise elevating legrest

Slowly rotate the legrest up to the desired position. Ensure elevating legrest is locked in position.

Lower elevating legrest

- 1. To allow the elevating legrest to lower without dropping suddenly, support its weight and move the release lever forward.
- 2. Slowly lower elevating legrest to desired position.
- 3. Release lever. Ensure elevating legrest is locked in position before letting go of legrest.

Adjust Elevating Legrest Panel Position

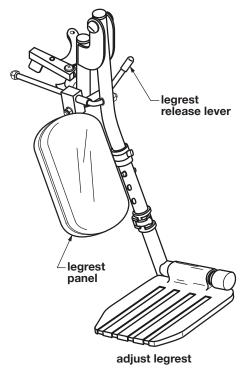



The legrest panel can be rotated up and out of the way. Refer to picture above.

- 1. To adjust panel, hold the panel and rotate it upward.
- 2. To return panel to position, hold the panel and rotate downward. The panel will stop at the proper position.

Adjust Footplate Extension Length (Elevating Legrest or Optional Footrest)

- 1. See picture at right. Loosen latch to free footplate extension inside hanger.
- 2. Press down on the locking button and adjust the footplate to the desired length. Ensure the locking button is completely extended and securely fastened in the adjustment hole.
- 3. Fasten latch to secure footplate extension inside hanger.
- 4. Repeat steps 1-3 for the other footplate extension.
- 5. Ensure both footplate extensions are securely fastened and minimum ground clearance is 2 1/2 inches.

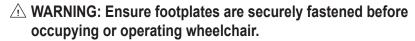

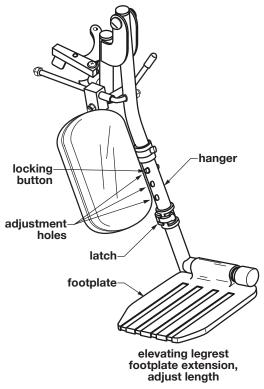

CROSSBRACES

Tighten Crossbraces

M13 wrench, M5 hex key


Check the crossbraces to ensure that the bolt and nut securing both crossbraces in the center of the wheelchair are secure (crossbraces should be loose enough to fold easily, yet snug enough to take up excess play). Use an M13 wrench and M5 hex key to tighten.

ATTENDANT WHEEL LOCKS

Adjust Wheel Locks

M10 wrench

- 1. Use an M10 wrench to loosen the adjustment bolt until the wheel lock slides on the frame.
- 2. Place the wheel lock in the locked position and slide it into contact with the tire.

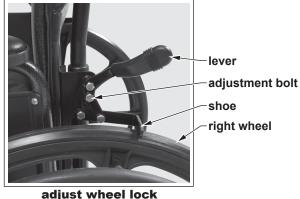

- 3. Place the wheel lock in the unlocked position and slide it 3/8" closer to the tire.
- 4. Use an M10 wrench to tighten the adjustment bolt and engage the wheel lock to check the fit. The wheel lock should indent the tire at least 3/8"
- 5. Repeat steps 1-4 for other wheel lock. Tighten the adjustment bolts securely to eliminate wheel lock movement on frame.
- lock in place appropriately before occupying or operating wheelchair.

7 MAINTENANCE

Protect your E&J Traveler HTC by having it serviced regularly. Proper care and maintenance are essential to keep your wheelchair in safe working condition. Periodic inspection, adjustment, and replacement of worn parts will provide many years of superb performance. When you believe that a component or part of your Traveler HTC is not functioning properly, contact your GF authorized distributor immediately, as a potentially hazardous condition could result. Only excellent condition is acceptable where safety is concerned.

Service Manual

There is no service manual for the Traveler HTC. Please contact your GF authorized distributor with service questions not answered by this manual.

Info: We recommend that you have a GF authorized distributor perform a six month maintenance check, as the distributor may find and correct a problem which might otherwise go undetected and eventually cause more serious problems and / or personal injury.

Do-It-Yourself Maintenance

You can do many of the scheduled maintenance tasks yourself, if you have mechanical ability and a few basic tools. Refer to the maintenance schedule on the next page for the recommended regularity of each procedure. If any maintenance procedure is not clear to you, ask your GF authorized distributor for assistance.

- ▲ NOTICE: Improper maintenance can cause operating problem and may affect your warranty.

MAINTENANCE SCHEDULE						
Procedure	Perform at least every					
	Week	Month	3 Months	6 Months		
Check tire wear	~					
Check handrims	~					
Check wheel lock engagement	~					
Check anti-tippers	~					
Wipe off frame with soft cloth	~					
Check upholstery		~				
Check rear wheel adjustment		~				
Check arms		/				
Check backposts / push handle		/				
Check elevating legrests / footrests		~				
Clean frame			~			
Check caster stem rotation			~			
GF distributor maintenance check				~		
Check rear wheel bearings (distributor)				V		
Check caster bearings (distributor)				V		

List of Tools

The tools and cleaning supplies listed will assist in the procedures outlined in Section 7.

30 weight oil (available at most auto parts stores)
Phillips screwdriver
soft cloth
mild soap and water solution

General Care

Always evaluate the overall operation of your wheelchair. It should function with ease and should travel straight without excessive drag or pull to one side.

Remember, your GF authorized distributor knows your wheelchair best when it comes to service and repairs. Contact your distributor with any questions or concerns regarding the safe operation and maintenance of your wheelchair. Regular maintenance is essential for your safety and continued operation of your wheelchair.

Check Tire Wear

Examine tires at least once a week for surface wear and cracks and replace them as needed. Replace tires when they become loose on the rims or cracks appear.

Check Handrims

Check handrims at least once a week. Inspect each handrim for rough or sharp edges and, if any are found, replace handrims immediately. Ensure that all hardware is properly aligned and secure.

Check Wheel Lock Engagement

Check wheel lock engagement at least once a week. See **Adjust wheel locks** in Section 6 to adjust wheel lock engagement. If a wheel lock is worn or damaged, replace it immediately. Inspect the hardware for looseness or signs of wear.

Ensure that the locking mechanism operates smoothly. The locking assembly should be tight enough so that the wheel can not rotate or the lock slip. Check that the locking shoe does not press against the tire when in the unlocked position. Excessive force should not be required to either engage or release wheel locks. Oil the wheel lock pivot points with one or two drops of 30 weight oil. Remove excess oil and dirt.

Check Anti-Tippers

Check the anti-tippers at least once a week. Ensure that the antitippers are securely fastened and properly positioned.

Check Upholstery

Check upholstery at least once a month. Inspect for rips, tears and worn spots. Ensure that all upholstery-attaching screws are present, properly aligned, and well-secured. Use a Phillips screwdriver to tighten upholstery mounting screws. Check attaching screws for sharp edges or stripped screws, and replace if found.

Check Rear Wheel Adjustment

Inspect the wheels at least once a month. Check alignment by elevating the rear of the wheelchair on a stable object until the rear wheels clear the ground, or placing the wheelchair upside down in a stable position such that the wheels can spin freely. Spin the wheels; there should be no wobble or sideplay, and the wheels should spin freely without binding. The bearings should be clean and rotate smoothly. Check rim sideplay to verify that bearings are not too loose. If there is a problem, contact your GF authorized distributor. If adjustment is required, this should be done by your GF authorized distributor only.

Check Arms

Check arms at least once a month. Inspect for sharp edges or cracks which could weaken the arm, and replace if found. Ensure that all attaching screws are present and tight. Use a Phillips screwdriver to tighten arm pad mounting screws. Check for burrs on the screw heads and replace if found. Ensure that screws do not extend into the padding.

Check Backposts / Push Handle

Check backposts at least once a month. Ensure that all mounting hardware is securely fastened and that the backposts are not bent or damaged. Contact your GF authorized distributor if you observe cracking or peeling paint or plating.

Check Elevating Legrests and Optional Footrests

Check elevating legrests and footrests at least once a month. Inspect the locking mechanisms to confirm sure fit. Check for cracks, burrs, or sharp edges, and replace if found. Ensure that the legrest or footrest will automatically lock securely in place and will not accidentally unlock. If equipped with heel loops, ensure the anchor bolts are tight and secure.

Cleaning your Traveler HTC

Wipe off the frame frequently, at least once a week, using a soft cloth. Dry the wheelchair immediately if exposed to moisture. Clean the frame every three months with a mild soap and water solution. The frame does not need to be waxed. Do not use solvents, abrasive waxes, caustic chemicals or spray silicone. Never use abrasive cleansers; they could scratch the finish. Never use steam or high pressure cleaners. Clean upholstery and plastic components at least once a month with a mild soap and water solution.

Check Casters

Check the caster stems for proper rotation at least every three months. The caster forks must swivel freely to facilitate steering and handling. If caster stem adjustment is too loose, the caster will flutter or shimmy; if too tight, the wheelchair will be difficult to steer. If the caster stems require adjustment, or the stem bearings require replacement, contact your GF authorized distributor. Ensure that stems are firmly attached to forks, and that forks and stems are not bent. Evaluate all threads, locking nuts and bearings.

Check Wheel Bearings

Have your GF authorized distributor check caster and rear wheel axle bearings at least every six months.

8 TROUBLESHOOTING

Continual use of your Traveler HTC necessitates maintenance, especially if the factory-set adjustments have been altered. The following troubleshooting guide lists several common problems that may occur, and offers corrective actions for each. If you are unsure of the solution or unable to diagnose the problem, do not hesitate to ask your GF authorized distributor for assistance.

SYMPTOM				DM		
looseness in wheelchair	squeaks / rattles	caster flutter	sluggish turning	chair veers left	chair veers right	PROBABLE CAUSE AND CORRECTIVE ACTION
1	\	✓	1			Nuts and/or bolts may be loose. If so, tighten. Bolts should be snug.
		1	1	1	1	Rear wheels and/or casters may be adjusted improperly. Ensure that both rear wheels are mounted in identical positions, and that casters are mounted in identical positions.
		1	1	1	1	Caster stem(s) may be adjusted improperly. See Graham-Field distributor to correct adjustment.

Info: Use only Everest & Jennings replacement parts. A Traveler HTC parts catalog is available online at www.grahamfield.com.

9 LIMITED WARRANTY

SCOPE OF WARRANTY

GF Health Products, Inc. ("GF") warrants to the original purchaser only that it will replace or repair components, at GF's sole discretion, that are defective in material or workmanship under normal use and service. All warranties are conditioned upon the proper use of the products strictly in accordance with good commercial practice and applicable GF instructions and manuals, including proper use and maintenance. To the extent that a component is warranted by a third party, GF conveys all of its rights under that warranty to the original purchaser, to the extent permitted.

This limited warranty shall only apply to defects that are reported to GF's customer service team within the applicable warranty period and which, upon examination by GF or its authorized representative, prove to be a warranty item. This limited warranty is not transferable.

The warranted components and time period are set forth below:

The applicable warranty period shall commence from date of shipment to the original customer, unless there is an expiration date on the component in which case the warranty shall expire on the earlier of warranty period or the expiration date.

OBTAINING WARRANTY SERVICE

A GF Customer Service Representative must authorize warranty service. Please contact the GF Customer Service department by calling 770-368-4700, sending a fax request to 770-368-2386 or by e-mailing a request to cs@grahamfield.com. Specific directions will be provided by the Customer Service Representative. Failure to abide by the specific directions will result in denial of the warranty claim.

EXCLUSIONS

The warranty does not cover and GF shall not be liable for the following:

- Defects, damage, or other conditions caused, in whole or in part, by misuse, abuse, negligence, alteration, accident, freight damage, tampering or failure to seek and obtain repair or replacement in a timely manner;
- Products which are not installed, used, or properly cleaned and maintained as required in the official manual for the applicable product;
- 3) Products considered to be of a non-durable nature including, but not limited to: casters, filters, fuses, gaskets, lubricants, and charts;
- 4) Accessories or parts not provided by GF;
- 5) Charges by anyone for adjustments, repairs, replacement parts, installation or other work performed upon or in connection with such products which are not expressly authorized in writing, in advance, by GF;
- Any labor or shipping charges incurred in the replacement part installation or repair;
- 7) Costs and expenses of regular maintenance and cleaning; and
- 8) Representations and warranties made by any person or entity other than GF.

ENTIRE WARRANTY, EXCLUSIVE REMEDY AND CONSEQUENTIAL DAMAGES DISCLAIMER

THIS WARRANTY IS GF'S ONLY WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. GF MAKES NO IMPLIED WARRANTIES OF ANY KIND INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IF ANY MODEL OR SAMPLE WAS SHOWN TO THE CUSTOMER, SUCH MODEL OR SAMPLE WAS USED MERELY TO ILLUSTRATE THE GENERAL TYPE AND QUALITY OF THE PRODUCT AND NOT TO REPRESENT THAT THE PRODUCT WOULD NECESSARILY CONFORM TO THE MODEL OR SAMPLE IN ALL RESPECTS.

THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PARTS. GF SHALL NOT BE LIABLE FOR AND HEREBY DISCLAIMS ANY DIRECT, SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO: DAMAGES FOR LOSS OF PROFITS OR INCOME, LOSS OF USE, DOWNTIME, COVER, OR EMPLOYEE OR INDEPENDENT CONTRACTOR WAGES, PAYMENTS AND BENEFITS.

The warranties contained herein contain all the representations and warranties with respect to the subject matter of this document, and supersede all prior negotiations, agreements and understandings with respect thereto. The recipient of this document hereby acknowledges and represents that it has not relied on any representation, assertion, guarantee, warranty, collateral contract or other assurance, except those set out in this document. For additional information on this product or this warranty, please contact a GF Customer Service Representative.

NOTES:

- 1) Additional terms and conditions may apply.
- 2) Freight claims must be notated on the Bill of Lading and must be made with immediacy. The ICC regulations govern specific requirements for freight claims. Failure to abide by those regulations may result in a denial of the freight claim. GF will assist you in filing the freight claim.
- 3) Claims for any short shipment must be made within thirty (30) days of the invoice date.

GF Health Products, Inc. 2935 Northeast Parkway Atlanta, GA 30360 Tel 770-368-4700 Fax 770-368-2386 www.grahamfield.com

10 INDEX

A	M			
Adjustments 17	Maintenance 23			
Anti-theft pole, install 15	N			
Anti-tippers, check 25	NOTICE, significance 4			
Anti-Tippers, install 14	P			
Arm, install 18	Push handle / anti-fold bar, install 14			
Arm, remove 18	R			
Arms, check 26	Ramps and Inclines 11			
Assembly 13	Reaching / bending 10			
В	Rear wheel adjustment, check 26			
Backposts, check 26	Rear wheels 17			
Balance 9	S			
С	Safety precautions 5			
Casters 17	Storage 13			
Caster stems, check 27	Т			
CAUTION, significance 4	Tires, check 25			
Crossbraces, tighten 22	Tools, for adjustment, list 17			
Curbs and steps 12	Tools for assembly, list 13			
E	Tools, for maintenance, list 24			
Elevating legrest elevation, adjust 20	Transfer activities 9			
Elevating legrest, lower 20	Traveler HTC, cleaning 27			
Elevating legrest panel position, adjust	Traveler HTC, illustration 8			
20	Troubleshooting 28			
Elevating legrest, raise 20	U			
Elevating legrests, install 16	Unpacking 13			
Elevating legrest, swingaway 19	Upholstery, check 25			
F	W			
Footplate extension length, adjust 21	WARNING, significance 4			
Front rigging, attach 19	Warnings 5			
Front rigging, remove 19	Warranty, limited 29			
G	Wheel bearings, check 27			
Getting started 8	Wheel lock engagement, check 25			
Н	Wheel locks, adjust 22			
Handling tips 9				
Handrims, check 25				
1				
Info, significance 4				
Inspection 13				

Introduction 3

CE Certification

GF Health Products, Inc.

2935 Northeast Parkway Atlanta, Georgia 30360 Tel: 770-368-4700 Web: www.grahamfield.com

EC REP EC Authorized Representative CEpartner4U BV, ESDOORNLAAN 13 3951 DB MAARN The Netherlands +31(0)6-516-536-26 www.cepartner4u.com







Manufactured for: GF Health Products, Inc. 2935 Northeast Parkway Atlanta, Georgia 30360 USA

> tel: 770-368-4700 fax: 770-368-2386



www.grahamfield.com

Made in China